



PERCEPT

Expand your senses.

Quick Start Guide


Version 1.0

May, 2024

OVERVIEW

When combined with PERCEPT Cloud, the PERCEPT Gateway provides instant access to live and recorded video from any connected camera, from any remote site. The solution brings together disparate video surveillance systems to provide secure, comprehensive video monitoring and response capabilities—from a single pane of glass.

How it works

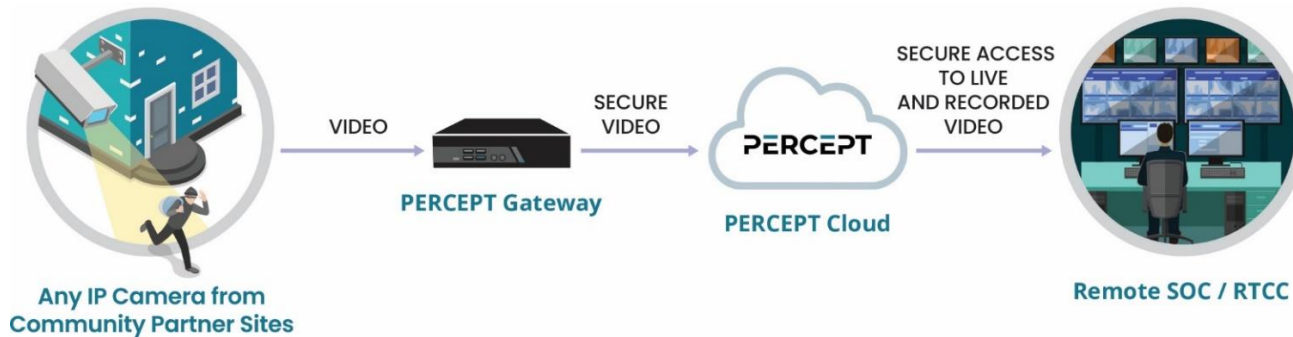

The PERCEPT Gateway is a small onsite edge appliance that seamlessly connects to local IP cameras in a few short steps, without an onsite IT specialist. A secure and encrypted gateway for live video, the PERCEPT Gateway keeps local recording of all connected cameras for a configurable time.


Secure remote access to PERCEPT Gateways is provided by PERCEPT Cloud, a cloud-based device and video management platform that provides centralized management for any number of remote site gateways and cameras. PERCEPT Cloud offers device management and instant access to live and recorded video stored on every gateway through a simple, powerful web-based interface. No video is stored in the cloud.

The solution includes native support through a Genetec™ Security Center VMS plugin that allows your Genetec systems to securely connect to PERCEPT Cloud to access on-demand, live or recorded video from any camera, from any enrolled PERCEPT Gateway. This native integration allows for centralized live and recorded video monitoring by any remote personnel trained on Genetec™ software.

HARDWARE INSTALLATION

The PERCEPT Gateway can be placed on a flat surface, such as a desktop, or mounted via the supplied mounting bracket. Position the unit to allow for cable clearance at the rear of the unit. Make sure the air vents on top and front of the unit are not obstructed. It is recommended to connect DC Power after all other connections as the PERCEPT Gateway boots up as soon as power is available.




Connect the following items to the PERCEPT Gateway

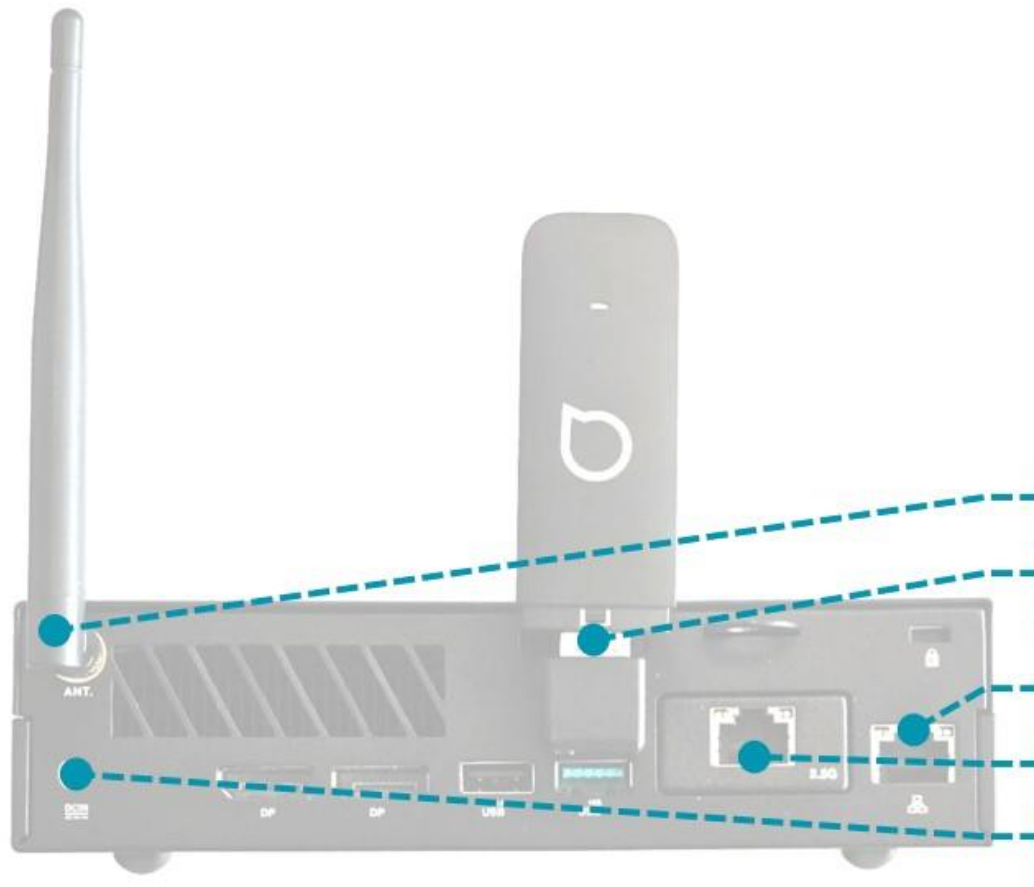

1. Wi-Fi Antenna
2. Cellular modem with 90° USB adapter
3. Wired Internet (WAN)
(optional if camera LAN has internet access)
4. Camera LAN
5. AC/DC Power adapter to DC power input

Steps to add the PERCEPT Gateway to your organization

1. In your PERCEPT Cloud account and organization, navigate to **Home / Devices / Overview**
2. Click on the **Add** button
3. Enter the **Display Name**, **Mac Address** and **Device PIN** then click on the + button, or scan the **PERCEPT Cloud QR code** from the PERCEPT Gateway label
4. Click the **Add 1 device** button or repeat step above to add other device(s)

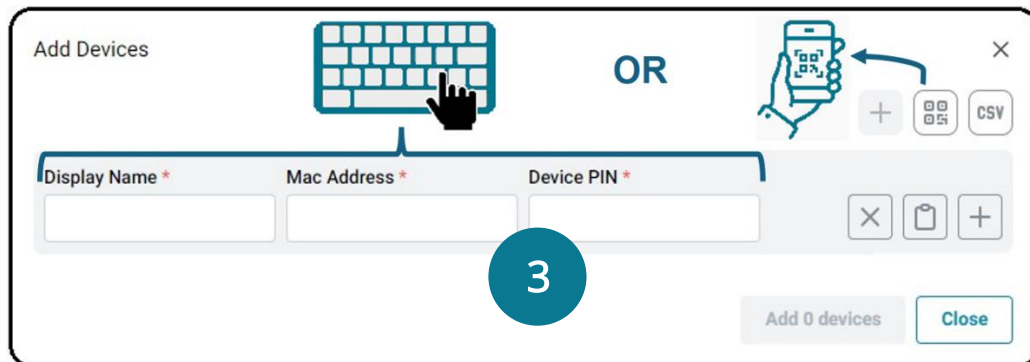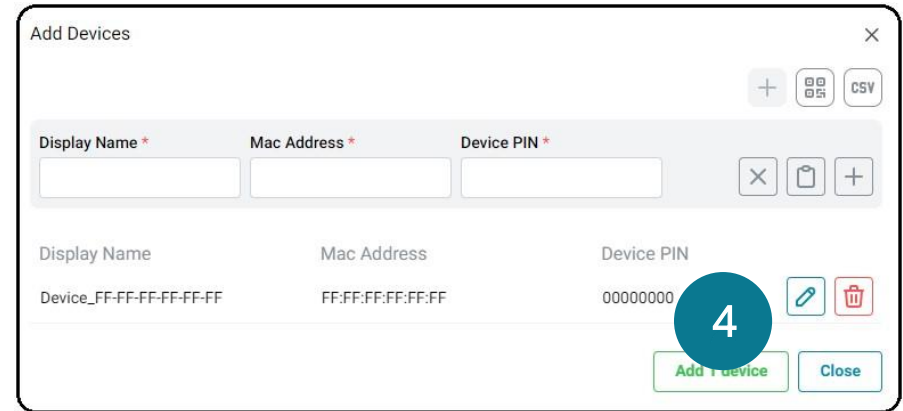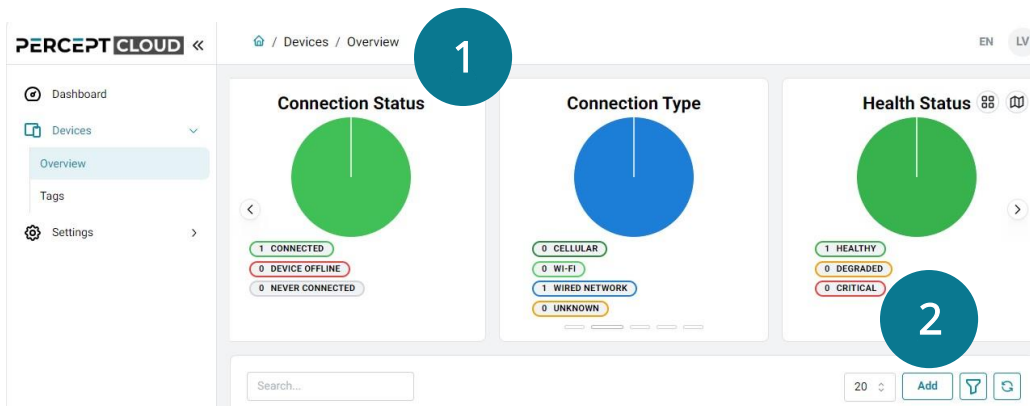

ADVANCED CONFIGURATION & NEXT STEPS

This guide is intended to quickly bring the PERCEPT Gateway into a PERCEPT Cloud organization for the most common use case, an installation with wired Internet access. All subsequent configuration, deployment and operations are performed from PERCEPT Cloud.

Refer to the following online resources for deployment guidance and/or instructions to setup the PERCEPT Gateway with a wireless internet connection (Wi-Fi / LTE).

IONODES CitySafe Solution

<https://www.ionodes.com/CitySafe/>

IONODES YouTube Channel

https://www.youtube.com/channel/UCRIUtEBtRveU6StrgadS9Mg?sub_confirmation=1